

FLIPPER®
Two Device Universal
Instruction Manual



**Environmentally Sensitive,
Frustration Free Packaging**

We have reduced unnecessary packaging to make Flipper user friendly, and to reduce our carbon footprint.

TV & Cable / Sat / DTV

Functions

- ON/OFF:** controls both the TV and STB.
- Press **MUTE** once to turn the sound on or off.
- Channel Up/Down:** Controls the STB channels.
- Volume Up / Down:** Controls the TV volume.
- "Dash"** is used for DTV channel entry.
- 0-9** located under the sliding door, are for set up and channel entry.
- 0**
- LC** is for "Last Channel" – returns to the last channel you are viewing.
- TV and STB** buttons are used to set up your devices.
- ADD and DEL** buttons are used to set up favorite channels.
- Indicator light - flashes during set up and when the remote is used.

Introduction

Thank you for your purchase. We have Code updates, Video tutorials & FAQs online: FlipperRemote.com then click Support.

Assistance via email: Support@FlipperRemote.com

We can schedule a telephone assist as well.

Please note how your STB (cable / satellite box) is connected to your TV. Occasionally, a user will inadvertently change the Input /

Source setting on the TV, causing confusion.

Start with your devices ON. Slide down the bottom half of Flipper to reveal the 0-9 and setup buttons. See code list for codes listed by Brand of your device. Updated codes available online.

Preset:

Flipper is preset to work many TVs and STBs. Test if your devices are the preset:

- (a) **TV:** press and release TV (light blinks once); test on/off and VOL;
- (b) **STB:** press and release STB, test on/off and CH.

If your devices work, then go to Favorites (4) below. If not, set up Flipper as follows:

Code entry:

Codes are usually listed by manufacture of the device, not cable provider. Please find your brand device in the attached list, or online.

- (1) Set TV: press and hold TV until the light turns solid, then enter the 4 digit code from the attached code list - (test on/off and VOL);
- (2) Set STB: press and hold STB

until the light turns solid, then enter the 4 digit code (test on/off and CH);

- (3) **Dual Mode:** press and release ADD once. Test all keys;
- (4) **Favorites:** if desired (see detail below);
- (5) **Lock:** press and hold ADD until the light turns solid, then enter 955 (TV only: press and hold TV until the light turns solid, then enter 955).

Favorites

CH +- scrolls through Favorites; 0-9 work as normal. If using Flipper as TV only, use the TV button instead of STB.

- (1) Make a list of channels you want to save - channels scroll in the order they are entered.
- (2) To program: Press and hold STB and ADD at the same time until the light turns solid; (If TV only, then press and hold TV and ADD at the same time).
- (3) Then enter channels: (Try three channels first to test format). Example: For adding channels 7, 44, and 110, the format is: 7- ADD; 44 - ADD; 110 - ADD.
- (4) Press and release the STB button to exit, and test;
- (5) If working, then add all your

channels by repeating 2-4.

- (6) **Dual Mode:** press and release ADD once. Test all keys;
- (7) **Lock:** press and hold ADD until the light turns solid, then enter 955 (TV only: press and hold TV until the light turns solid, then enter 955).
- (8) **Unlock:** (to change settings): press and hold ADD until the light turns solid, then enter 956.

Sound Bars

Please see instructions online if you need to set up a soundbar.

On/Off:

Flipper is preset to turn on and off the TV and STB by default.

Occasionally, a user may experience one device on while the other s off.

To Modify so only TV turns on and off:

TV Only: Press and hold **ADD** until the light turns solid, then enter 999.

TV and STB: Press and hold **ADD** until the light turns solid, then enter 998.

Alternative set-up options:

If code entry does not work, or we do not have a code, then try code search and Learning:

Code Search:

Start with the TV and STB on. Code search sends codes from the database to your TV or STB to search for a match. When the device turns off, a match is found.

- (1) Press and release the device you want to search (i.e., TV or STB), light flashes;
- (2) Select search code region.
 - (a) **US / Canada:** Press and hold ON/OFF and 2 for three seconds until the light turns solid, then release;
 - (b) **UK / EU :** Press and hold ON/OFF and 1 for three seconds until the light turns solid, then release;
- (3) Press and release On/Off. The light will flash, sending 15 codes to the TV.
- (4) Either: the device (eg TV) turns off, or the light turns solid. Note: If your home region did not turn up a match, try the other region. Many devices share codes.
- (5) Once the TV turns back on, press and release TV (or STB). Test other functions.

Learning:

Flipper can "learn" (copy) the IR signals from your existing remote control. Each button is programmed separately. When learning TV signals, use the TV button; when learning STB functions, use the STB button.

Do this procedure in low light, as light can interfere with the IR signal. Flipper's Learning IR bulb is the darker bulb.

- (1) Place both Flipper and your device remote on a table with the tops facing one another.
- (2) On Flipper, press and hold TV and On/OFF at the same time until the light starts to flash. Release the buttons;
- (3) Press and release the key you want to copy, for example, VOL +; light turns solid.
- (4) Press and release same key from your existing device remote until the light on Flipper starts flashing. Once blinking, the learning process for that key is done.
- (5) Keep repeating step 1-4 until you learn all the keys you want.
- (6) Press TV to exit.
- (7) Check the buttons to see if they learned to correct signal. If not, repeat the process as needed until all buttons learn the desired function. It may take a few tries to learn all signals.

Deleting Favorites:

Press and hold the STB (or TV) and DEL at the same time until the light turns solid, then enter the channel you want to delete, followed by DEL.

Reset to factory settings

Unlock: press and hold ADD until the light turns solid, enter 956

Reset: Press and hold ADD until the light turns solid, enter 954.

© Flipper LLC 2017.
US Patent Pending.
Support: www.FlipperRemote.com

